

**KENWOOD**


HI/FI STEREO COMPONENTS

# SERVICE MANUAL

**KL-555D (KL-5050D)**

**KL-777D (KL-6060D)**


**KL-888D (KL-7070D)**

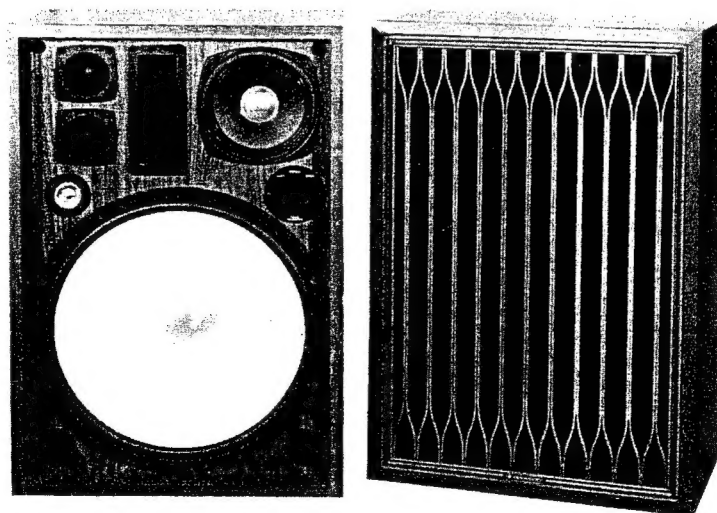


**SPEAKER SYSTEM**

## EXTERNAL VIEW


### KL-888D (KL-7070D)

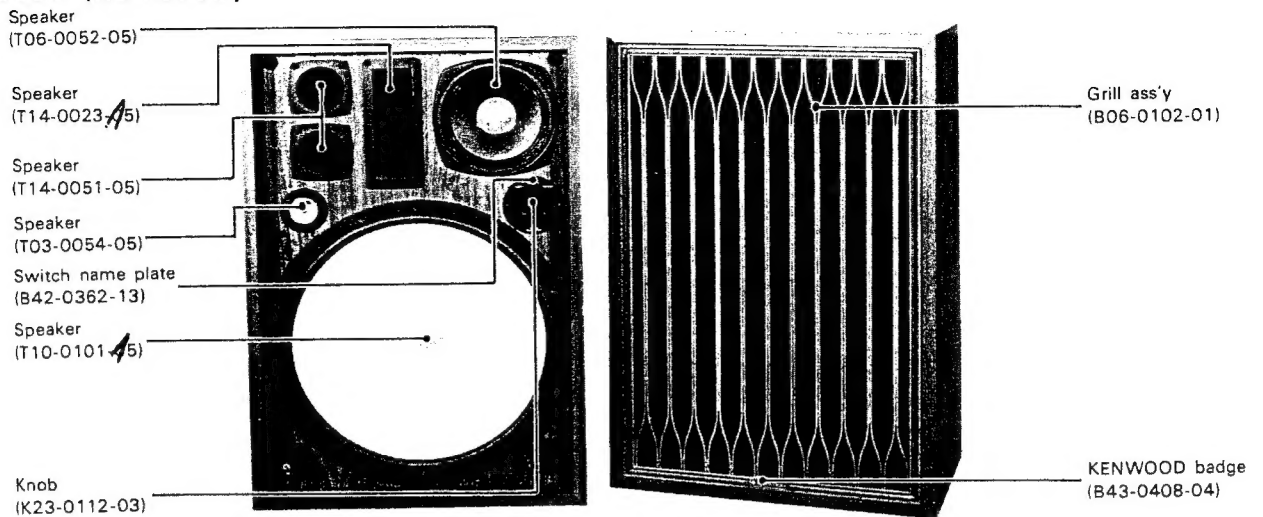

### KL-777D (KL-6060D)

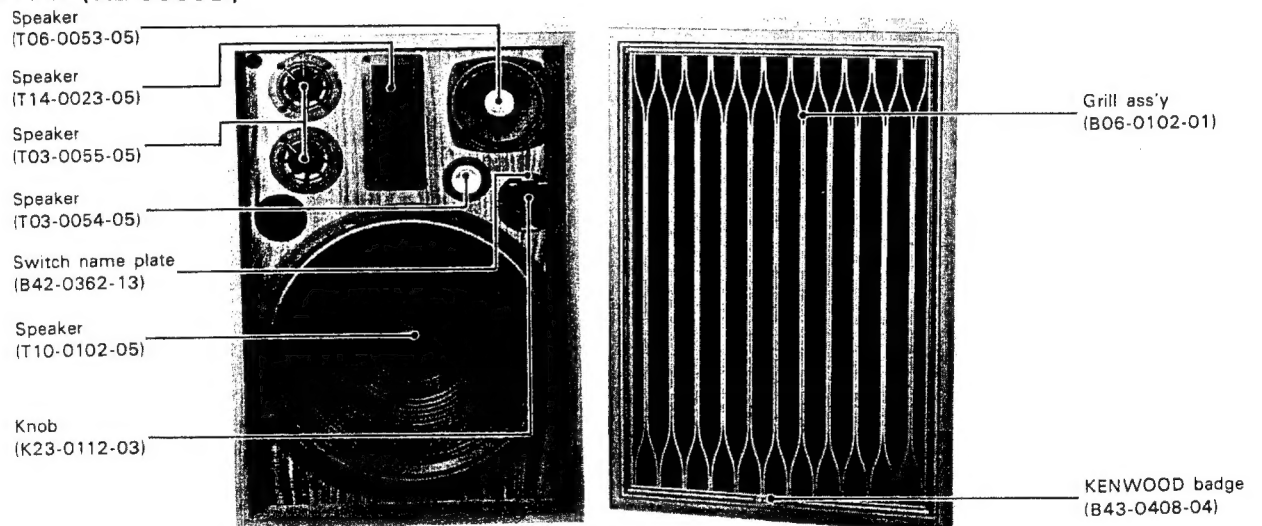


### KL-555D (KL-5050D)

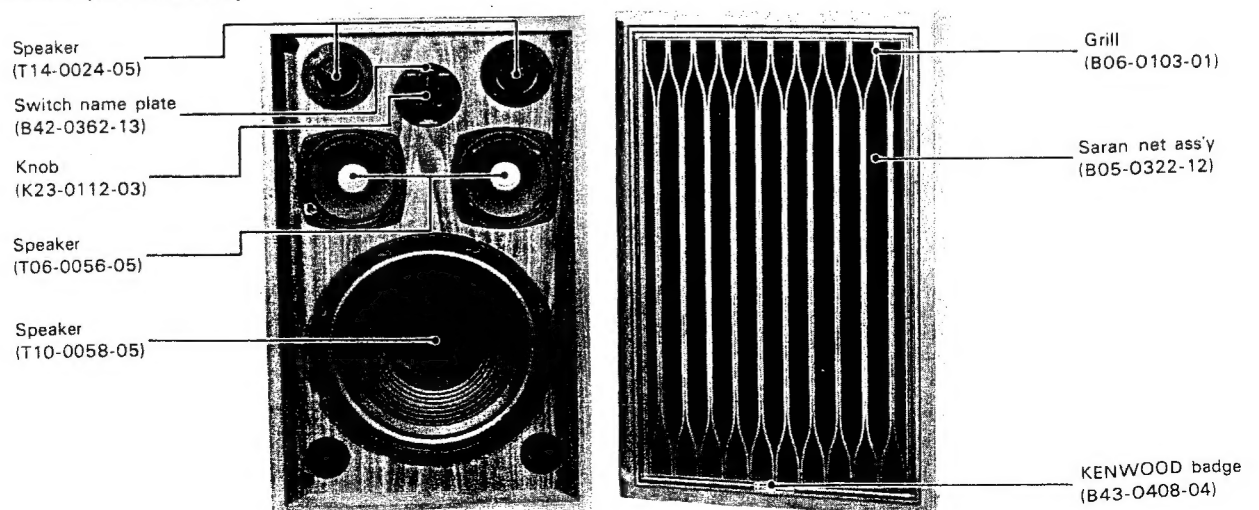


# SCHEMATIC DIAGRAM


KL-888D (KL-7070D)

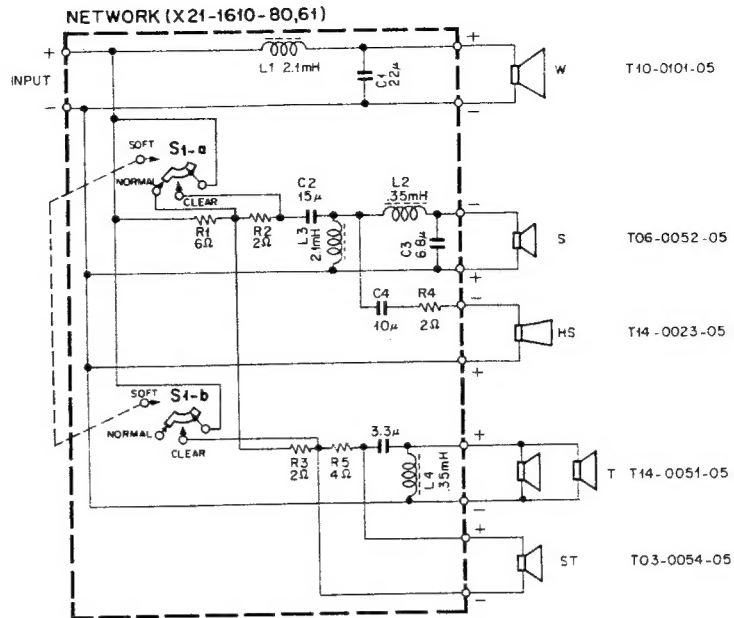

KL-777D (KL-6060D)

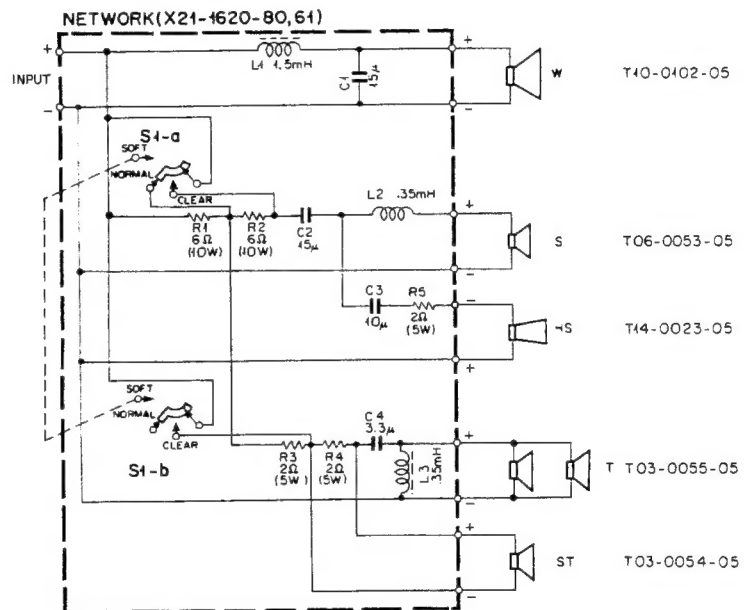

KL-555D (KL-5050D)

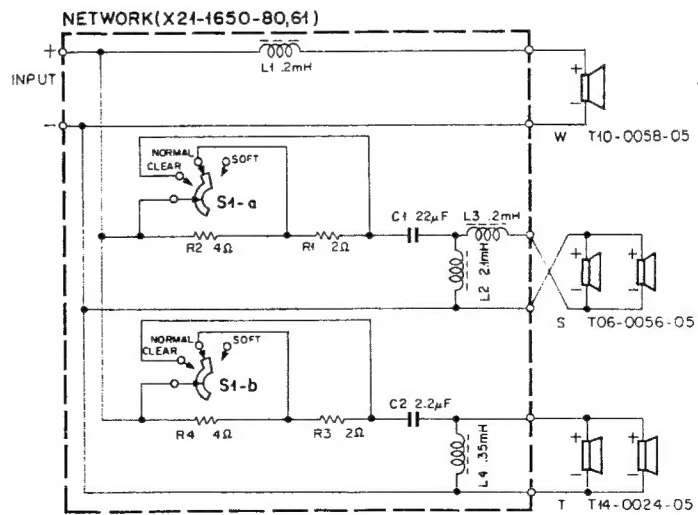

## PARTS LIST / SERVICE NOTE

**KL-888D:** U (PX), P (Canada), M (General Export)

**KL-7070D:** W (Audio Club)

☆ : New Parts

Ref. No.	Parts No.	Description	Re- marks
—	B06-0102-01	Grill ass'y	☆
—	B42-0362-13	Switch name plate	
—	B43-0408-04	KENWOOD badge	☆
—	B46-0050-00	Warranty card	U
—	B46-0051-00	Warranty card	U
—	B50-1909-00	Instruction manual	☆ U,M
—	B50-1922-00	Instruction manual	☆ W
—	B50-1937-00	Instruction manual	☆ P
—	E30-1003-05	Speaker cord	☆
—	H01-1926-04	Carton case (inside)	☆ U
—	H01-1927-04	Carton case (inside)	☆ M
—	H01-1928-04	Carton case (inside)	☆ W
—	H01-1948-04	Carton case (inside)	☆ P
—	H03-1001-04	Carton case (outside)	☆ M
—	H03-1002-04	Carton case (outside)	☆ W
—	H03-1009-04	Carton case (outside)	☆ P
—	H12-0229-03	Buffer fixture × 4	☆
—	H20-0808-04	Polyethylene cover	☆
—	K23-0112-03	Knob	
—	T03-0054-05	Speaker (super tweeter)	☆
—	T06-0052-05	Speaker (mid-range)	☆
—	T10-0101-05	Speaker (woofer)	☆
—	T14-0023-05	Speaker (high mid-range)	☆
—	T14-0051-05	Speaker (tweeter) × 2	☆
—	X21-1610-61	Network	☆ W
—	X21-1610-80	Network	☆ U,M,P
—	S01-2201-05	Rotary switch	☆

**KL-777D:** U (PX), P (Canada), M (General Export)

**KL-6060D:** W (Audio Club)

☆ : New Parts

Ref. No.	Parts No.	Description	Re- marks
—	B06-0102-01	Grill ass'y	☆
—	B42-0362-13	Switch name plate	
—	B43-0408-04	KENWOOD badge	☆
—	B46-0050-00	Warranty card	U
—	B46-0051-00	Warranty card	U
—	B50-1910-00	Instruction manual	☆ U,M
—	B50-1923-00	Instruction manual	☆ W
—	B50-1938-00	Instruction manual	☆ P
—	E30-1003-05	Speaker cord	☆
—	H01-1929-04	Carton case (inside)	☆ U
—	H01-1930-04	Carton case (inside)	☆ M
—	H01-1931-04	Carton case (inside)	☆ W
—	H01-1949-04	Carton case (inside)	☆ P
—	H03-1004-04	Carton case (outside)	☆ M
—	H03-1005-04	Carton case (outside)	☆ W
—	H03-1010-04	Carton case (outside)	☆ P
—	H12-0229-03	Buffer fixture × 4	☆
—	H20-0808-04	Polyethylene cover	☆
—	H25-0078-00	Instruction bag	U
—	K23-0112-03	Knob	

Ref. No.	Parts No.	Description	Re- marks
—	T03-0054-05	Speaker (super tweeter)	☆
—	T03-0055-05	Speaker (tweeter) × 2	☆
—	T06-0053-05	Speaker (mid-range)	☆
—	T10-0102-05	Speaker (woofer)	☆
—	T14-0023-05	Speaker (high mid-range)	
—	X21-1620-61	Network	☆ W
—	X21-1620-80	Network	☆ U,M,P
—	S01-2201-05	Rotary switch	☆

**KL-555D:** U (PX), P (Canada), M (General Export)

**KL-5050D:** W (Audio Club)

☆ : New Parts


Ref. No.	Parts No.	Description	Re- marks
—	B05-0322-12	Saran net ass'y	☆
—	B06-0103-01	Grill	☆
—	B42-0362-13	Switch name plate	
—	B43-0408-04	KENWOOD badge	☆
—	B46-0050-00	Warranty card	U
—	B46-0051-00	Warranty card	U
—	B50-1915-00	Instruction manual	☆ U,M,P
—	B50-1916-00	Instruction manual	☆ W
—	E30-1003-05	Speaker cord	☆
—	H01-1932-04	Carton case	☆ U
—	H01-1933-04	Carton case	☆ M
—	H01-1934-04	Carton case	☆ W
—	H01-1951-04	Carton case	☆ P
—	H12-0232-03	Buffer fixture × 4	☆
—	H20-0809-04	Polyethylene cover	☆
—	H25-0078-00	Instruction bag	U
—	K23-0112-03	Knob	
—	T06-0056-05	Speaker (mid-range) × 2	☆
—	T10-0058-05	Speaker (woofer)	☆
—	T14-0024-05	Speaker (tweeter) × 2	☆
—	X21-1650-61	Network	☆ W
—	X21-1650-80	Network	☆ U,M,P
—	S01-2201-05	Rotary switch	☆

### SERVICE NOTE:

**DO NOT APPLY THE SHOCK TO THE SCREW.**


T-nut would be out of place if the shock is applied to the screw by the screwdriver in the middle of removing the screw. (See figure.)

Take care in removing the screw. In the case of T-nut is out of place, remove the screw pulling it by the plier.

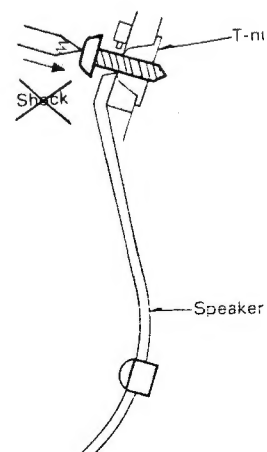

## PACKING/SPECIFICATIONS

### PACKING

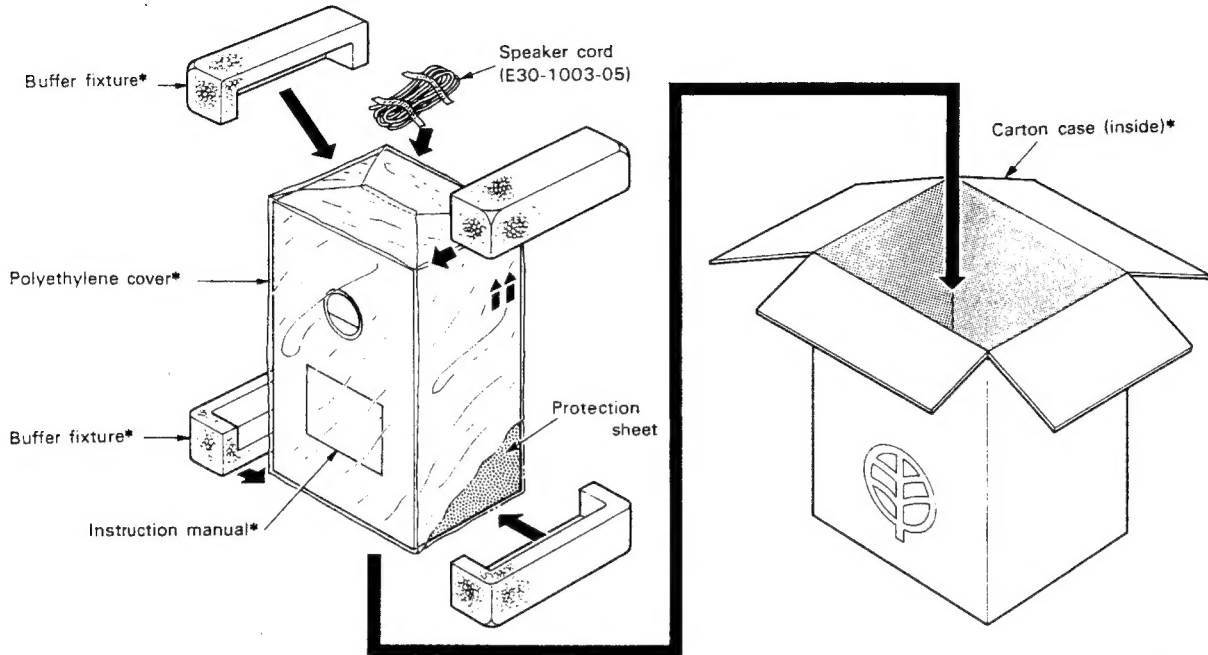


\* Refer to Parts list.

### SPECIFICATIONS

ITEM	MODEL NAME	KL-888D	KL-777D	KL-555D
<b>MOUNTED SPEAKERS</b>				
Woofer		406 mm (16") Cone Type × 1	406 mm (16") Cone Type × 1	300 mm (12") Cone Type × 1
Mid-Range		160 mm (6-1/2") Cone Type × 1	120 mm (5") Cone Type × 1	120 mm (5") Cone Type × 2
High mid-range		Horn Type × 1	Horn Type × 1	—
Tweeter		Horn Type × 2	50 mm (2") Cone Type × 2	Horn Type × 2
Super Tweeter		30 mm (1-1/4") Cone Type × 1	30 mm (1-1/4") Cone Type × 1	—
<b>ENCLOSURE</b>		Bass-Reflex Type	Bass-Reflex Type	Bass-Reflex Type
<b>MAXIMUM INPUT POWER</b>		150 Watts	130 Watts	110 Watts
<b>SENSITIVITY</b>		98 dB/W at 1 m	98 dB/W at 1 m	96 dB/W at 1 m
<b>FREQUENCY RESPONSE</b>		20 Hz to 22,000 Hz	22 Hz to 22,000 Hz	30 Hz to 20,000 Hz
<b>CROSSOVER FREQUENCIES</b>		700 Hz, 2,000 Hz 5,000 Hz, 10,000 Hz	800 Hz, 2,000 Hz, 6,000 Hz, 10,000 Hz	900 Hz, 5,000 Hz
<b>IMPEDANCE</b>		8 ohms	8 ohms	8 ohms
<b>FINISH</b>		Walnut Grain	Walnut Grain	Walnut Grain
<b>ADDITIONAL FEATURES</b>		3-Step Tone Selector, One Touch Connection Speaker Terminals	3-Step Tone Selector, One Touch Connection Speaker Terminals	3-Step Tone Selector, One Touch Connection Speaker Terminals
<b>DIMENSIONS</b>		W 445 mm (17-17/32") H 660 mm (26") D 280 mm (11-31/32")	W 445 mm (17-17/32") H 660 mm (26") D 280 mm (11-31/32")	W 390 mm (15-11/32") H 633 mm (24-29/32") D 290 mm (11-13/32")
<b>WEIGHT</b>		24.6 kg (54.1 lbs)	22.6 kg (49.8 lbs)	15.0 kg (33.1 lbs)

# DATA

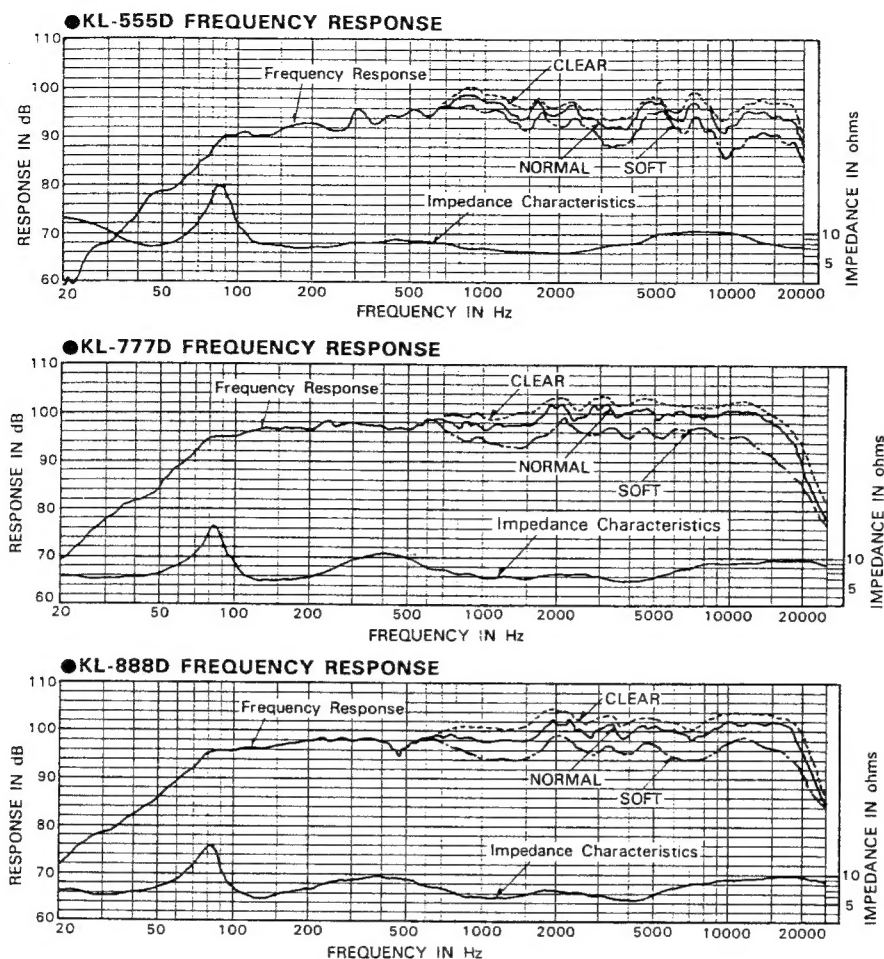

**KENWOOD ELECTRONICS, INC.**

■ 15777 SOUTH BROADWAY, GARDENA, CALIFORNIA 90248 U.S.A.

■ 72-02 51ST AVENUE, WOODSIDE, N.Y. 11377 U.S.A.

**TRIO-KENWOOD ELECTRONICS, N.V.**

■ HARENSESTEENWEG, 484. 1800 VILVOORDE, BELGIUM.

**TRIO-KENWOOD ELECTRONICS, GmbH.**

■ 6056 HEUSENSTAMM, RUDOLF-BRAAS-STR. 20, WEST GERMANY.

**TRIO-KENWOOD FRANCE S.A.**

■ 15, RUE PAUL BERT, 94200 IVRY-SUR-SEINE, PARIS, FRANCE.

**TRIO-KENWOOD CORPORATION**

■ 3-6-17 AOBADAI, MEGURO-KU, TOKYO, JAPAN.